

SLAVE DEVICE



Basic functions and menu guide

This is a quick guide for the QEES Z-Wave slave devices basic functions and main menu. Each of the menus has a color code feedback: Delayed timer - yellow, Load type - purple, Network - blue, Menu exit - red. Every time you reach a menu or an option, the LED of the device will light in the color associated to that menu or option. You can cycle through them with single clicks and confirm your choice with a long press.

Should you need more details on how to perform certain actions, please consult the device's online manual at www.qees.eu



One single click (and release).



One short blink.



One single click and hold.



One long blink.



A fade between two colors.

Basic functions



Toggle the local and remote loads.



Dim up (or down) the associated loads and the local load (if the device is a dimmer).



Toggle the local load (without associated) of the device.



Dim up/down the local load (if the device is a dimmer).



Attempt to Join a Z-Wave Network. If the device is already part of a Z-Wave Network it will broadcast a Z-Wave NIF.



Start Delayed Timer Procedure.



Main Menu selection. LED will light white.



Main menu



Delayed Timer

Yellow menu



Click and hold to enter **Delayed Timer** options.
Long yellow blink.



15 Minutes



Click and hold to set delay to 15 minutes.
LED will then blink green 1 time.



30 Minutes



Click and hold to set delay to 30 minutes.
LED will then blink green 2 times.



45 Minutes



Click and hold to set delay to 45 minutes.
LED will then blink green 3 times.



60 Minutes



Click and hold to set delay to 60 minutes.
LED will then blink green 4 times.



Timer Status



Click and hold to show timer status of device.
LED will then blink green multiple times, once for each 15 min.



Menu Exit



Click and hold to exit menu.
LED will then light white.



Load Type



Click and hold to enter **Load Type** options.
Long purple blink.



Report Load Status



Click and hold to show load status of device.
LED will then glow green 1 time if set for Incandescent,
2 times if set for LED & CFL.



Recheck



Click and hold to automatically set load type.
LED will then blink blue several times (while checking)
and green 1 time when done.

Plus edition only



Set as Incandescent



Click and hold to set load type to Incandescent.
LED will then glow green.

Standard edition only



Set as LED & CFL



Click and hold to load type to set LED & CFL.
LED will then glow green.

Standard edition only



Menu Exit



Click and hold to exit menu.
LED will then light white.



Network



Click and hold to enter **Network** options.



Long blue blink.



Remote Association



Click and hold to make device wait for remote association. LED will then blink blue several times (waiting feedback) and then do a long green blink.



Z-Wave Learn Mode



Click and hold to make device enter Z-Wave Learn Mode. LED will then blink blue several times (waiting feedback) and then do a long green blink.



Factory defaults



Click and hold to confirm restoring default settings. LED will then make 1 long green blink.



Menu Exit



Click and hold to exit menu. LED will then light white.




Menu Exit



Click and hold to enter Basic functions.

LED turn off.

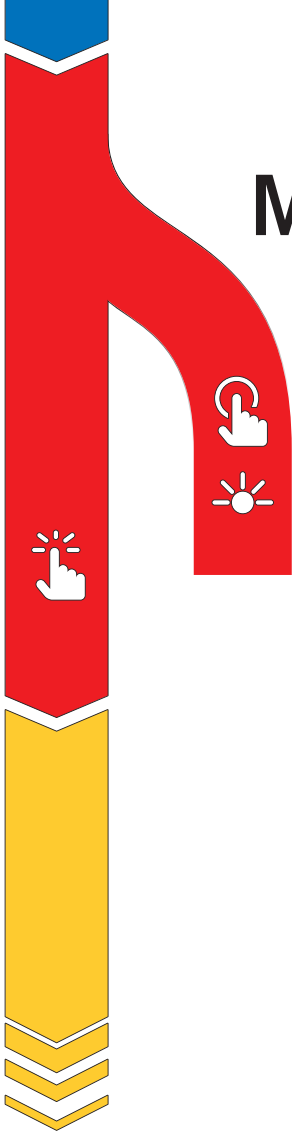



Thank you for purchasing a QEES device. Our products are designed to help you save energy and, at the same time, increase comfort. For a complete experience, we recommend using this device together with MyKey, QEES' Z-Wave based controller.

For more tips on green living and energy saving, please visit www.qees.eu.